



EASY POWER POST™

INSTALLATION INSTRUCTIONS




IMPORTANT SAFETY INFORMATION

READ AND COMPLETELY UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLING PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY OR DEATH.

This product is intended for use by trained technicians only. This product should not be used by anyone who is not familiar with and not trained to use it. When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol. These instructions are not intended to supersede any company construction or safety standards. These instructions are offered only to illustrate safe installation for the individual. PLP products are intended for the specified application only. Do not modify this product under any circumstances. Do not reuse or reinstall any PLP product unless that capability is expressly indicated in the product's Installation Instructions. For proper performance and personal safety, be sure to select the proper PLP product before installation. PLP products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.

PACKAGE COMPONENTS

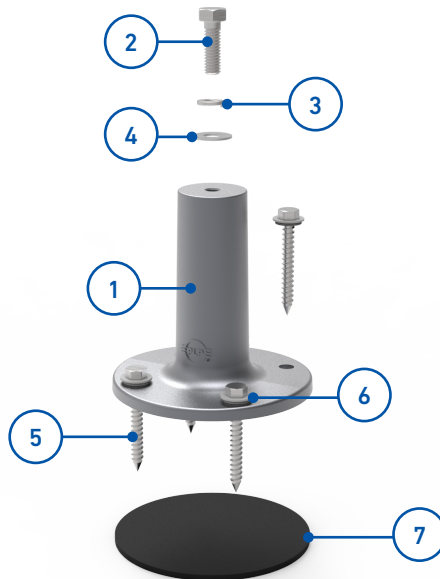


1. Easy Power Post with pre-applied butyl mastic (1)
2. 5/16" x 1" Stainless steel hex bolt (1)
3. 5/16" Stainless steel lock washer (1)
4. 5/16" Stainless steel flat washer (1)
5. 1/4" x 2" Stainless steel lag screws (4)
6. 1/4" Neoprene bonded stainless steel washers (4)
7. Butyl mastic (1)

Structural Certification

Mechanical Load Rating: Designed and Certified for Compliance with IBC & ASCE/SEI-7 through separate PE reviews.

INSTALLATION

- 1 From the bottom of Easy Power Post, peel off the protective paper backing that protects the butyl mastic.

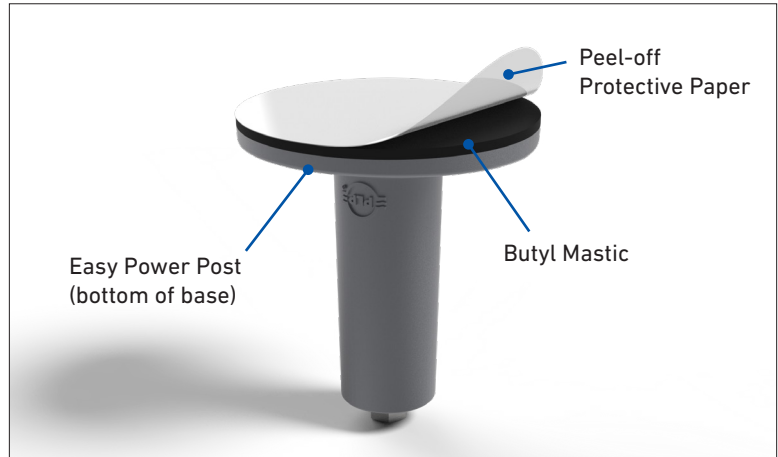

- 2 Align the Easy Power Post to the substrate and press firmly, sticking it to the substrate.



- 3 Drive the lag screws into the substrate until the neoprene rubber protrudes from the washer edges.



GLOBAL HEADQUARTERS
660 BETA DRIVE
CLEVELAND, OH 44143

+1 440 461 5200
SOLAR@PLP.COM
PLP.COM