


## MORAY™ SHIELD CONNECTOR


Be sure to read and understand this procedure completely before applying product. Be sure to select the proper size PREFORMED™ product before application.

1. Position the Connector assembly at the cable sheath opening.

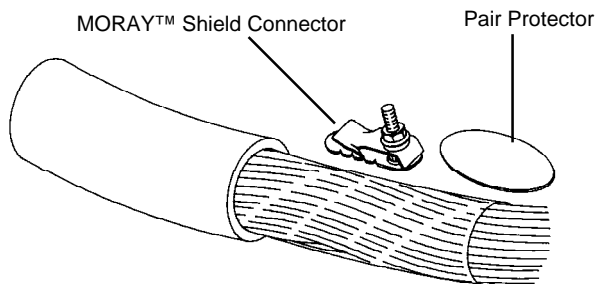


2. Slide the connector with thumb pressure into the cable sheath opening. If you cannot easily slip connector in, then follow tip below.

**PLP TIP:** Place the shank of a screwdriver against the connector and use a tool to tap connector into full position. The top plate of the connector should slide on top of the cable jacket; the bottom plate should slip between the cable shield and cable core wrap.

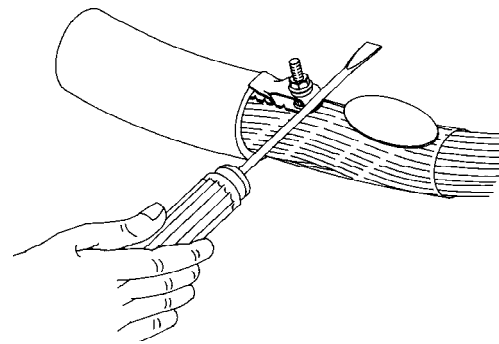

3. Once in position, slide the thermal pair protector under the base plate of the connector assembly to isolate the connector from the cable core wrap.

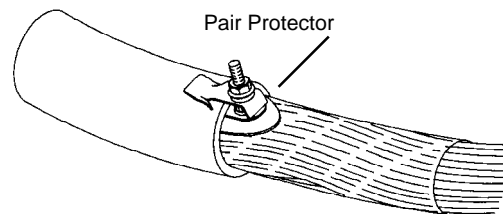

4. Connect grounding harness to connector stud according to your company standard practices.

### SAFETY CONSIDERATIONS

1. This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. Failure to follow these procedures may result in personal injury.
2. When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact.
3. For proper performance and personal safety, be sure to select the proper size PREFORMED Products before application.
4. This product is intended for use by trained craftspeople only. This product should not be used by anyone who is not familiar with, and not trained to use it.