




Riser Cable Support With Bracket

For use on jacketed cable transitioning from underground to overhead builds.

Be sure to read and completely understand this procedure before applying product. Be sure to select the proper PREFORMED™ product before application.

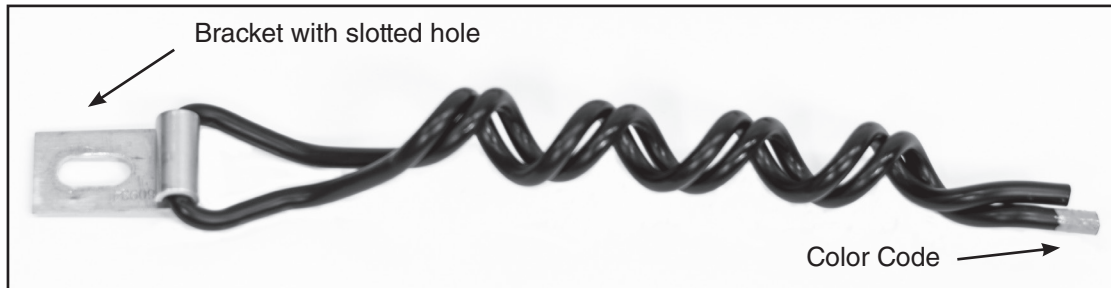

Step #1 Pre-drill a hole into the utility pole and insert a lag bolt through a washer and through the slotted hole in the bracket.



Step #3 Begin wrapping the first pitch nearest the bracket of the Riser Cable Support around the cable. Continue wrapping to the end of the Riser Cable Support.



Step #2 Tighten the lag bolt to secure the Riser Cable Support to the utility pole.



Step #4 Complete installation by snapping in the ends of the legs. Completed installation shown below.



SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual.

FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.

Do not modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol.

For proper performance and personal safety, be sure to select the proper size PREFORMED™ product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • preformed.com • email: inquiries@preformed.com

SP3541

2