





PERCH KIT ASSEMBLY FOR RAPTOR PROTECTOR™ PLATFORM


Be sure to read and completely understand this procedure before applying product. Be sure to select the proper PREFORMED™ product before application.

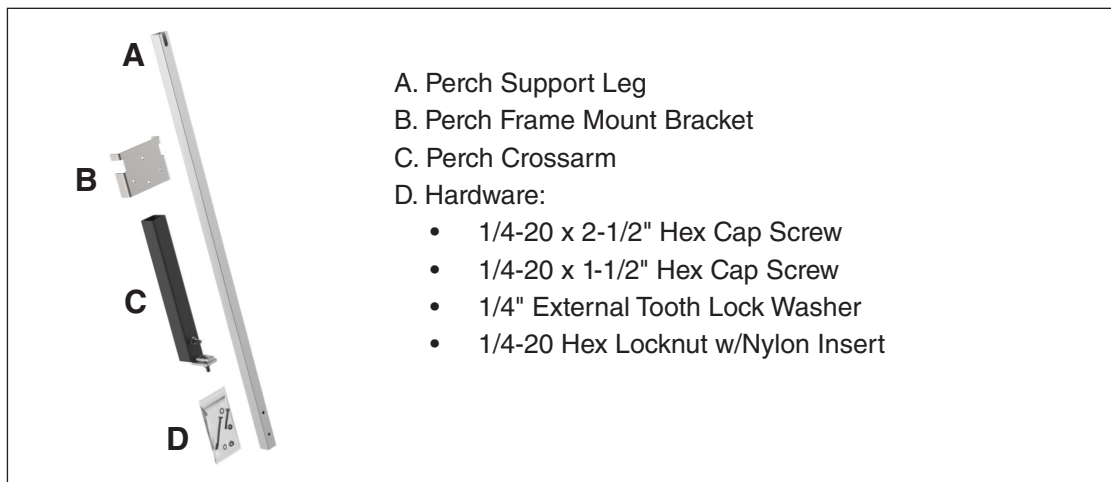


STEP #1 Determine which angle you would like to install the perch assembly.

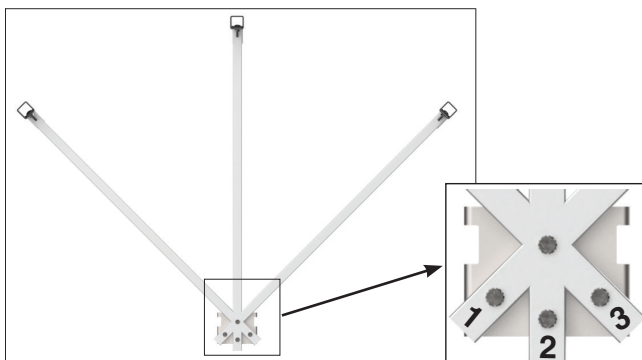


NOTE: The perch installs into the same position as one of the Nest Retention Posts.

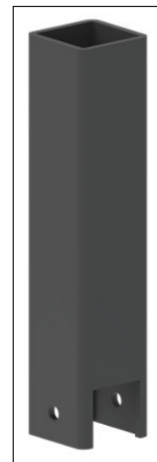

STEP #2 Attach the perch frame mount and support leg using the provided hardware onto the platform utilizing one of the pre-drilled holes on the frame.

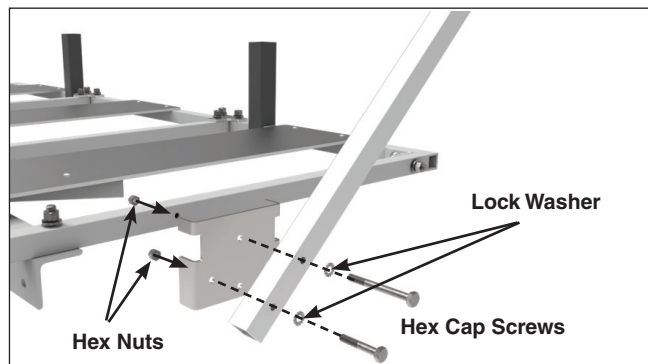


STEP #3 Install the perch crossarm by sliding the preinstalled hex cap screw into the slot of the support leg. Tighten the hex nut to secure the crossarm in place.

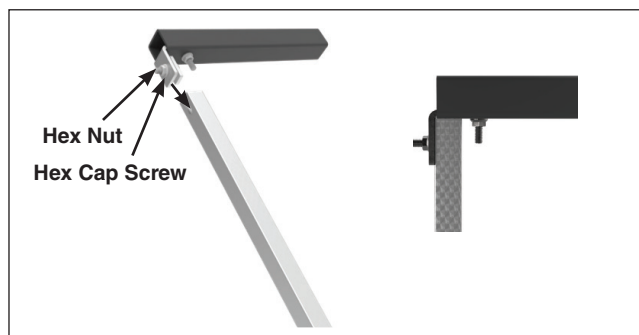


STEP #4 Completed installation of the Perch onto the RAPTOR PROTECTOR™ Platform.

3' x 3'

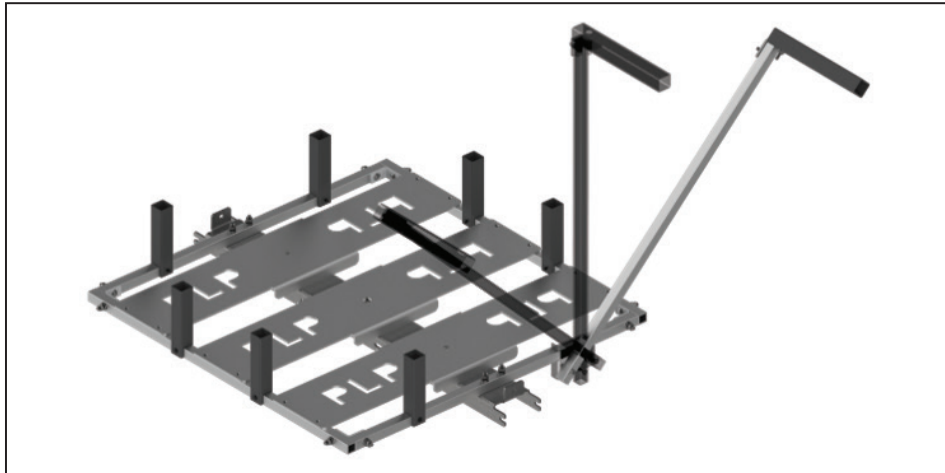

5' x 5'

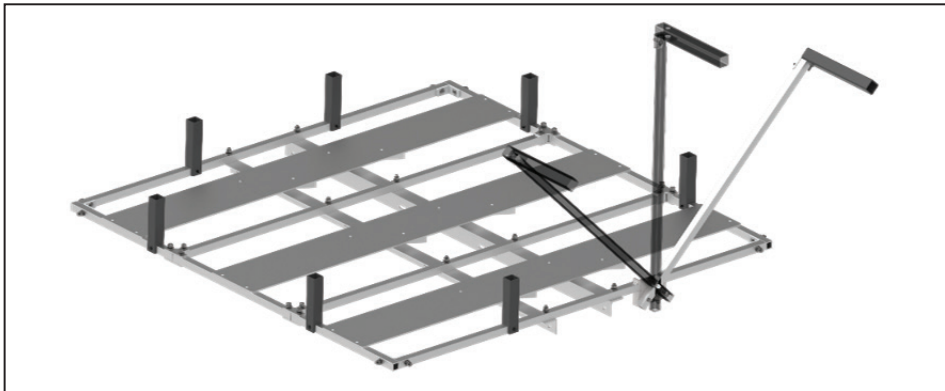

SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual.

FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.

Do not modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol.

For proper performance and personal safety, be sure to select the proper size PREFORMED™ product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS