



APPLICATION PROCEDURE
PREFORMED LINE PRODUCTS

END SLEEVE

(Be sure to select proper size PREFORMED™ product before application)

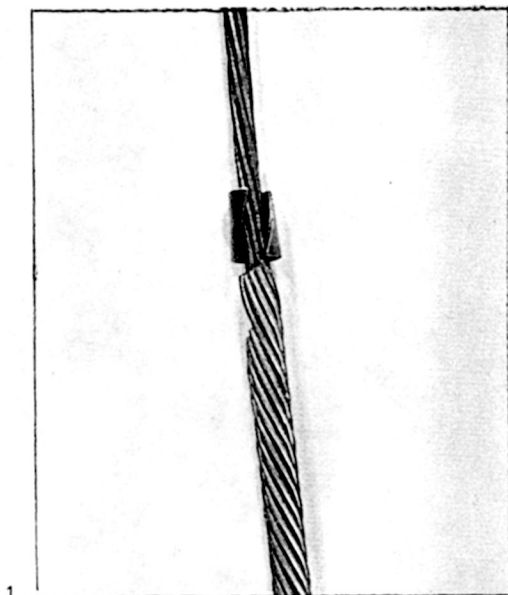


1.

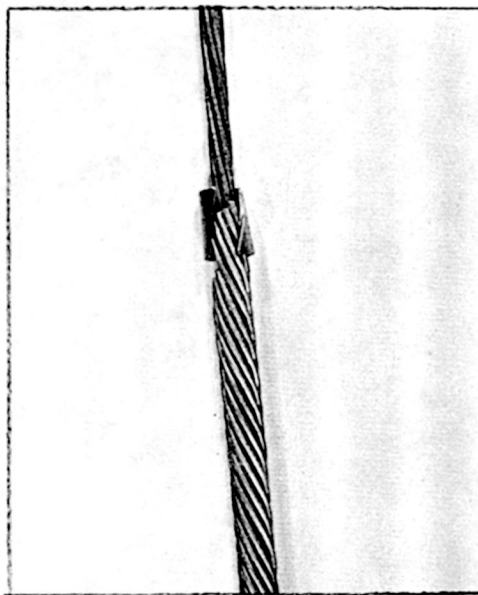

2.

To achieve maximum coverage with the end sleeve, the application should be conducted in the following manner. Place the slot side of the end sleeve over the long leg of the dead-end.

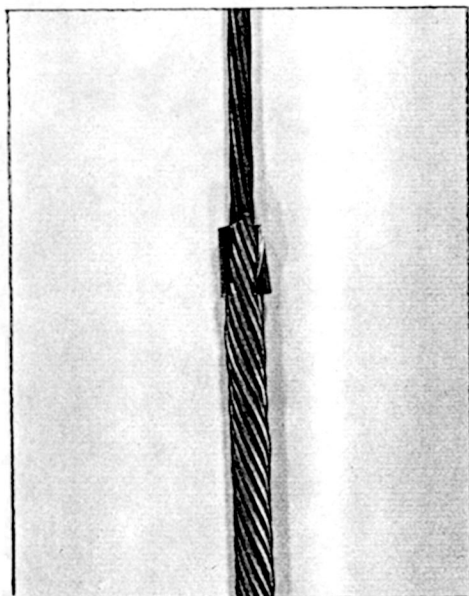

3.

Drive the sleeve downward until the rods of the short leg are completely covered. The rods of the long leg should be even with, or may extend above, the top edge of the sleeve.

SAFETY CONSIDERATIONS

1. This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. Failure to follow these procedures may result in personal injury.
2. When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact.
3. For proper performance and personal safety be sure to select the proper sized PREFORMED product before application.
4. This product is intended for use by trained craftspeople only. This product **should not be used** by anyone who is not familiar with and trained in the use of it.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • www.preformed.com • e-mail: inquiries@preformed.com

© Copyright 1989 Preformed Line Products Company

All Rights Reserved

Litho in U.S.A.