



POWER RAIL™ UNIVERSAL END CLAMPS ADDENDUM

Installing Modules using Universal End Clamps:

- A. Place Module on two POWER RAILS, centering it lengthwise. Use a square to square-up the Module to the POWER RAILS.
- B. Position Universal End Clamp underneath the module with notches facing the outside edge of the module, and rail centered between the ‘forks’ of the clamp. Slide clamp notches towards the module flange until the flange bottoms out in the notches. Tighten 5/16” bolt on bottom of universal end clamp. Torque to 6 ft.-lbs. Repeat for both end clamps. (See Figure 9-8)

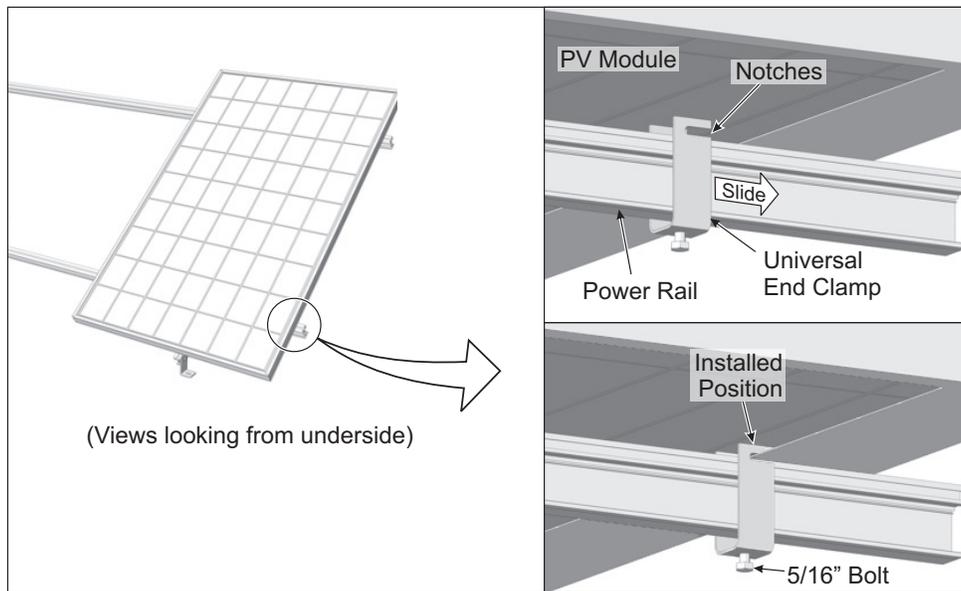


Figure 9-8: Installing PV Modules using Universal End Clamp

SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual.

FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.

Do not modify this product under any circumstances, except where noted in this application procedure.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol.

For proper performance and personal safety, be sure to select the proper size PREFORMED™ product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.