

## **AIRCRAFT WARNING DEVICE**

### **GENERAL**

The Preformed Line Products AIRCRAFT WARNING DEVICE has been designed to be applied by hand or by hot stick. Assembly requires an aircraft warning sphere and a helical tie.



**Aircraft warning sphere**



**Helical tie**

## **APPLYING THE AIRCRAFT WARNING DEVICE**

**STEP #1** Insert the helical tie through the top of the aircraft warning sphere.



**STEP #2** Slide the helical tie through until the top of the warning sphere sits half way down the length of the helical.




**STEP #3** Holding the warning sphere securely, wrap the helical tie onto the line starting from the painted indicator.

Indicator mark



**STEP #4** Once one side of the helical tie is wrapped onto the line completely, pull the other side of the helical around until the painted marks line up to form a loop and repeat STEP #3 for this side of the helical tie.

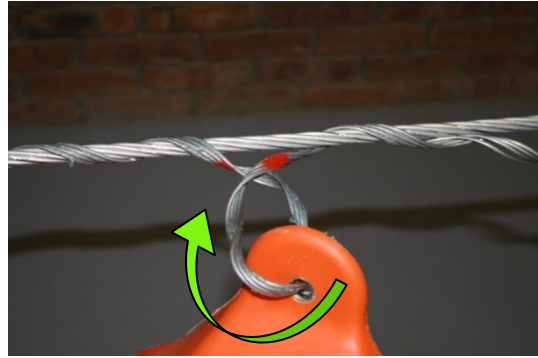

**STEP #5** Ensure both sides are wrapped securely from the painted indicator through to the helical end as shown:



**FINAL ASSEMBLY.** Assembly should look as follows:

