




BIRD PERCH DETERRENT™ for I-Beam

Be sure to read and completely understand this procedure before applying product. Be sure to select the proper size PREFORMED™ product before application.

NOTE: BIRD PERCH DETERRENTS should not be used if nesting of large birds is present.

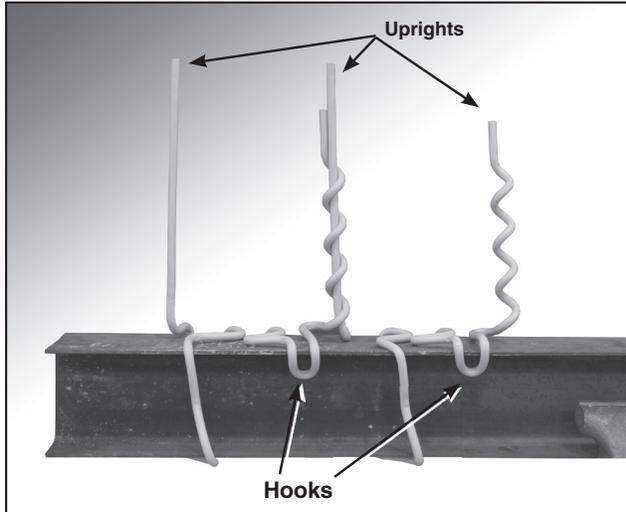


Step #1 Spread the vertical uprights of the BIRD PERCH DETERRENT to position them around the I-Beam.




Step #2 Keeping the uprights of the BIRD PERCH DETERRENT apart, position the unit so that the hooks are over the top of the I-Beam.



Step #3 Lifting on the uprights, flex them away from each other to snap the hooks over the top edges of the I-Beam.

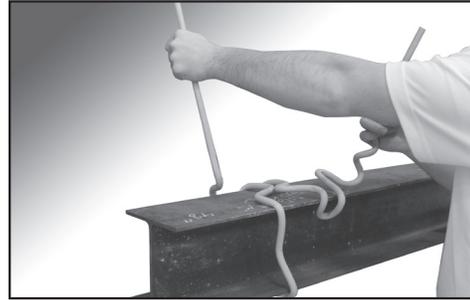

Step #4 Install a second BIRD PERCH DETERRENT in the same manner as in Steps 1-3. Install the second BIRD PERCH DETERRENT with the uprights oriented the same way as the first BIRD PERCH DETERRENT.

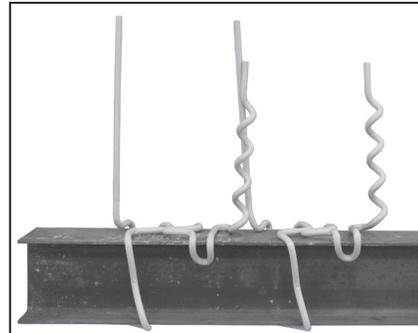


Step #5 Wrap the helical upright of the first deterrent around the straight upright of the second deterrent. Ensure that the bottom helical wrap is installed properly.



Step #6 Continue wrapping the helical leg until it is completely installed.



Step #7 Repeat the above steps until the desired coverage is achieved. Two BIRD PERCH DETERRENTS cover approximately 19" (48.3 cm) and are approximately 14.25" (36.2 cm) high.

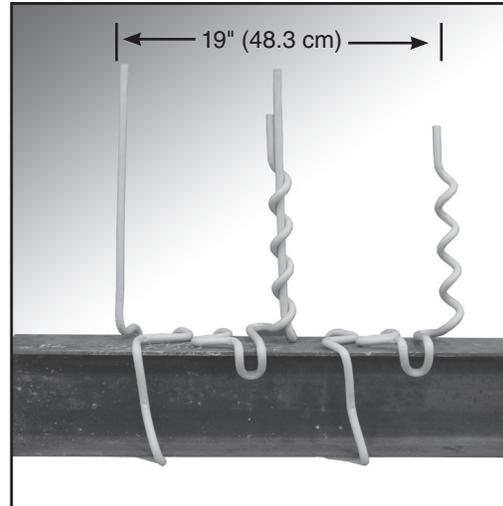

SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. **FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.**

This product may be removed and reinstalled during the initial installation if it is in good condition. After extended service life, it is recommended the product not be reused once removed from service.

Do not modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol.

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact.

For proper performance and personal safety, be sure to select the proper size PREFORMED™ product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • preformed.com • email: inquiries@preformed.com

SP3219-1

©2019 Preformed Line Products. All rights reserved.