




Eye-Lag Screw

Be sure to read and completely understand this procedure before applying product.
Be sure to select the proper size PREFORMED™ product before application.



Eye Lag Screw						
PLP Catalog Number	Description	Weight (lbs)	Overall Length (in)		Minimum Breaking Load (lbs)	Carton Qty.
			Overall	Shank		
ELS-9055	Eye Lag Screw 1/2" x 3-1/4"	0.38	5-1/8"	3-1/4"	11,000	75
ELS-9056	Eye Lag Screw 5/8" x 4"	0.68	6-1/2"	4"	17,500	50

Step #1 Select a drill bit 1/16" to 1/8" smaller than the diameter of the Eye-Lag Screw.

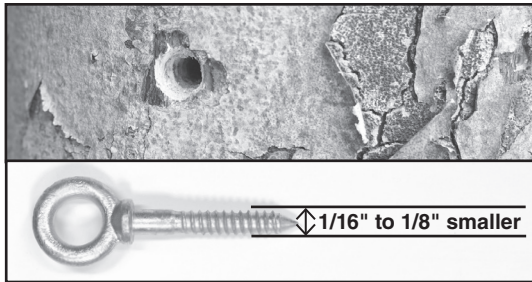

Step #3 Screw selected Eye-Lags into the pre-drilled holes.



Step #2 Drill two holes into the adjacent branches which are in alignment with each other, and aligned with the cable, and the Dead-end, to avoid side loading.



PLP Tip: Install the TREE-GRIP™ Dead-end, thimble, and cable. Reference the TREE-GRIP Dead-end application procedure (SP2056).



SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. **FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.**

This product is intended for a single (one time) use and for the specified application.
Do not reuse or modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact.

For proper performance and personal safety, be sure to select the proper size PREFORMED product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • prefomed.com • email: inquiries@prefomed.com

SP3440