






max tensor MX1-T Termination/Tensioner

Be sure to read and completely understand this procedure before applying product. Be sure to select the proper size PREFORMED™ product before application.


NOMENCLATURE

<p>MX1-T</p> 	<p>Optional tool for tensioning purposes:</p> <p>MX-AC2</p> 
---	---


Step #1 Start by wrapping the wire around the pole.

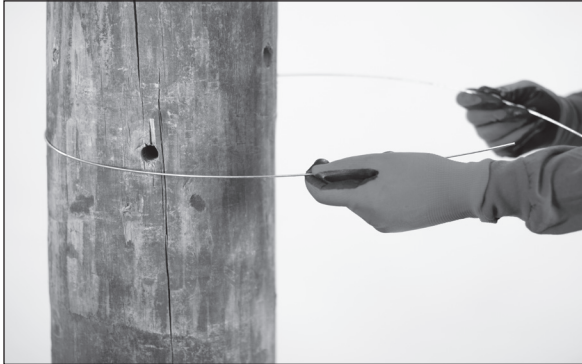

Step #3 Next insert the wire on the other side of the pole into the slot in the MX1-T and slide the MX1-T toward the pole.




Step #2 Find the arrow on the MX1-T and pull the wire through the hole in the MX1 in the direction of the arrow. Be sure to leave at least 4 in (10 cm) of tail.

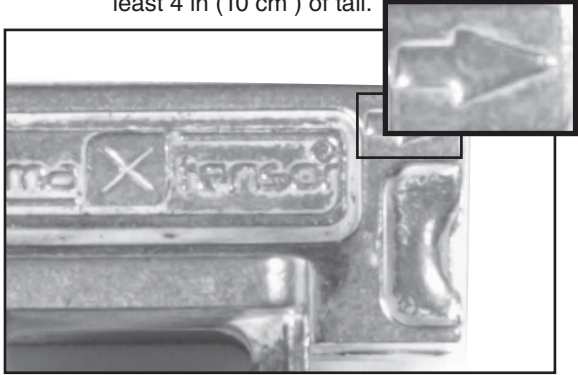


Step #4 Insert 4 inches of tail into MX-AC2 and open the handles of the MX-AC2 to tension.

Repeat if necessary.



Step #5 Bend excess wire under the MX1-T or cut it off.

Completed installations shown below.

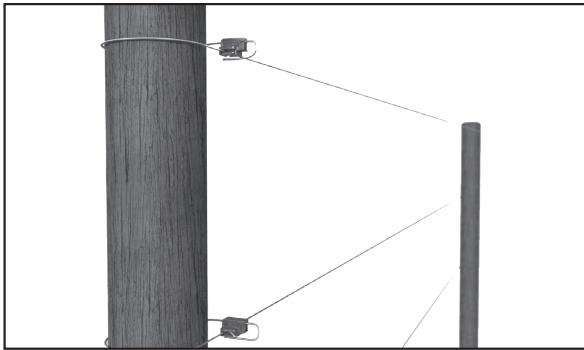

SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual.
FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.

This product may be removed and reinstalled during the initial installation if it is in good condition. After extended service life, it is recommended the product not be reused once removed from service.

Do not modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol.

For proper performance and personal safety, be sure to select the proper size PREFORMED™ product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • preformed.com • email: inquiries@preformed.com

SP3496