


INSTRUCTION SHEET


NOTE: THIS CLOSURE MAY BE USED ONCE - REPLACE WITH A NEW FILLED CLOSURE AFTER REENTERING

SIZING PROCEDURE


The insert groove will accept wires up to 0.400 in (10 mm) diameter. With the insert removed, wires up to 0.500 in (13 mm) can be used.

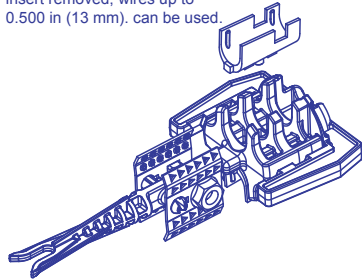

1

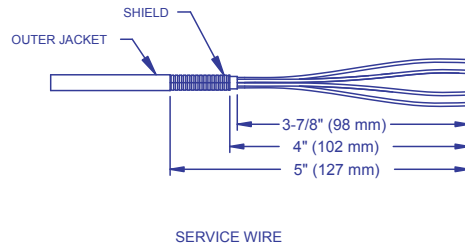

2

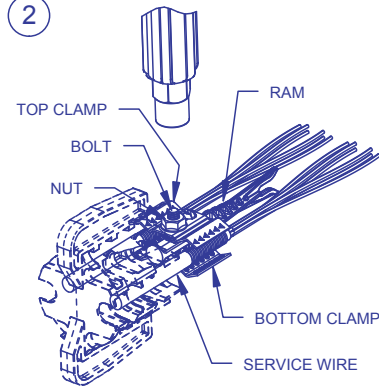

Ranger SERVICEAL® Closure

PREFORMED LINE PRODUCTS

© 2002 Preformed Line Products. All Rights Reserved.


Medical Caution -
No toxic materials present.

P/N: 07041


3

TOP

BOTTOM

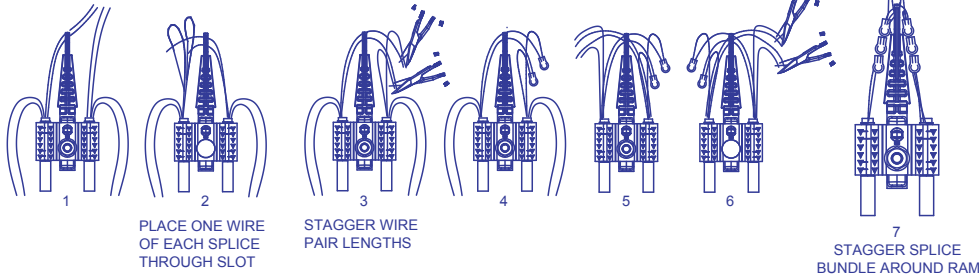

4

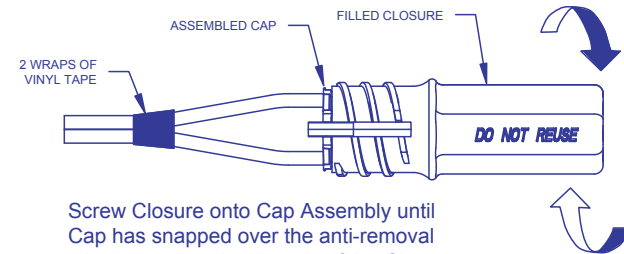

Screw Closure onto Cap Assembly until Cap has snapped over the anti-removal tabs located on the threads of the Closure